

REAL GAS FUEL EFFECT FIRES & WORE

Supplement to Instruction Manual for Battery operated controlled Fires

Fit fire as normal, as described in the Instruction Manual.

Secure unit firmly to solid base, i.e. the hearth.

Bleed gas line thoroughly, through hex slotted screw on inlet elbow. Ensure that no cables are in contact with the underside of the fire and are kept as far away as possible from any area that may become hot.

Position I.R sensor in a position near the fire, but with a clear line of sight from the operator ie. the handset, by means of velcro adhesive tabs supplied.

To ignite the fire, point the handset at the I.R. sensor and depress the 2 left hand circular buttons simultaneously. The start of the lighting procedure should now be indicated by an audible beep/click. When this is heard, the operator can let go of the buttons. The fire will now go through its ignition procedure (which lasts approx 10sec's) and will then finish in the maximum position.



To adjust to the minimum setting press the lower right hand triangular button indicated by the small flame and the minus symbol until the audible beep is heard, immediately let go of the button. The fire will then go to the minimum setting.

To adjust to the maximum setting follow the above procedure except press the plus or large flame button on the upper right hand side, instead of the minus button

To adjust to any position in between min. and max. Press and continue to hold, even after the audible beep has been heard, the minimum button if the fire is in the high setting and the maximum button if the fire is in the low position, the fire will then step by step adjust until the button is released. The fire will then remain at this position.

To select the standby position (only when the fire is lit) press and hold the small button on the lower left hand side depicted by the words "stand-by" until the audible beep is heard. The fire will then go to the standby mode i.e. Only the pilot is lit.

To turn the fire off, Press and hold the large circular button on the upper left hand side indicated by the white circular symbol, until the audible beep is heard. The fire will then switch off.